 



START HERE

Connect the projector to your notebook

- 1 Locate the required cables:

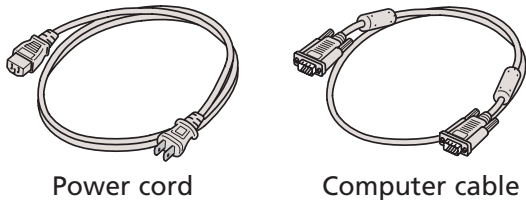

 
- 2 Connect the computer cable to the **Computer 1/Component Video 1** port on the projector.

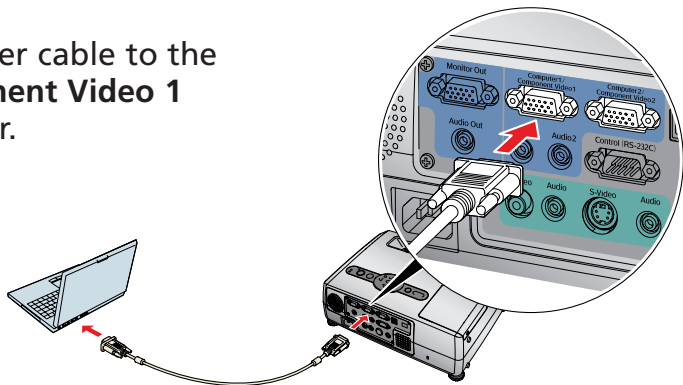

- 3 Connect the other end to your notebook's video-out or monitor port.

NOTE: If your notebook has a DVI connector, you need to either connect a DVI-to-VGA adapter to the included computer cable (see your computer's documentation), or purchase an optional DVI to VGA cable (for a higher-quality image). See your *User's Guide*.

 
- 4 Connect the power cord to the projector, then plug the other end into a grounded electrical outlet.

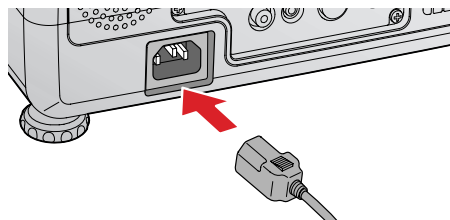

Turn on your equipment

- 1 Turn on your notebook.

 
- 2 Remove the projector's lens cover.

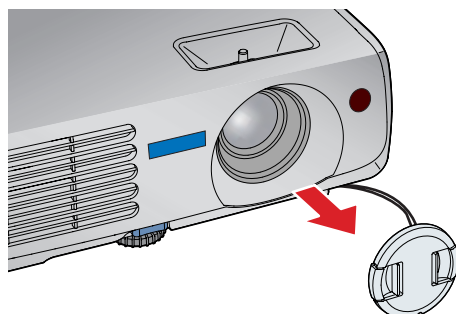

- 3 Make sure the **Power** light is orange and not flashing.

Power light is orange and not flashing

 - 4 Press the **Power** button to turn on the projector. The projector beeps and the **Power** light flashes as the projector warms up.

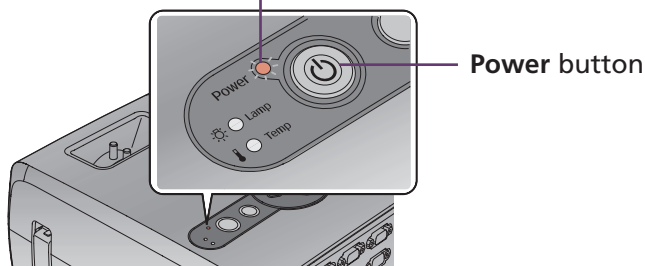

CAUTION: Before unplugging the projector...

To shut down the projector properly:

1. Press the **Power** button twice. The projector beeps twice, the lamp turns off, and the **Power** light flashes orange (about 60 seconds).
2. Once the light stops flashing and stays on, it's safe to unplug the projector.

Never unplug the projector when the **Power** light is green or flashing orange.



 
Follow these instructions to connect the projector to your notebook. For other setup options, see your *User's Guide*.

Adjust the image

- 1 If you've turned on your notebook and you don't see an image, press the **Source Search** button on the projector to select the image source.

NOTE: If you still see a blank screen or have other display problems, see the troubleshooting tips on the back of this sheet.

- 2 Rotate the focus ring to sharpen the image.

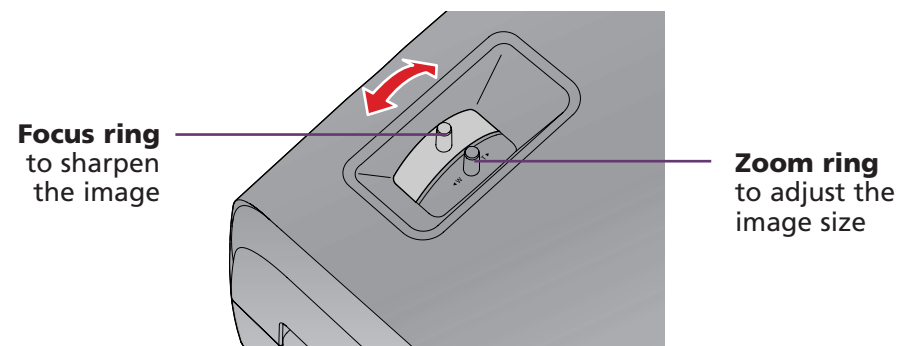


- 3 Rotate the zoom ring to reduce or enlarge the image. (You can also move the projector closer to or farther from the screen.)

- 4 If your image looks like or , you've placed the projector off to one side of the screen at an angle. Place it directly in front of the center of the screen, facing the screen squarely.




- 5 If your image looks like or , use the or buttons to square up the image.

Using the remote control

 1 If this is your first time using the remote, press the tab in to release the cover. Then remove the cover.

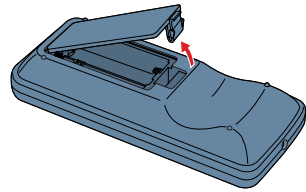

   2 Insert the batteries as shown and replace the battery cover.

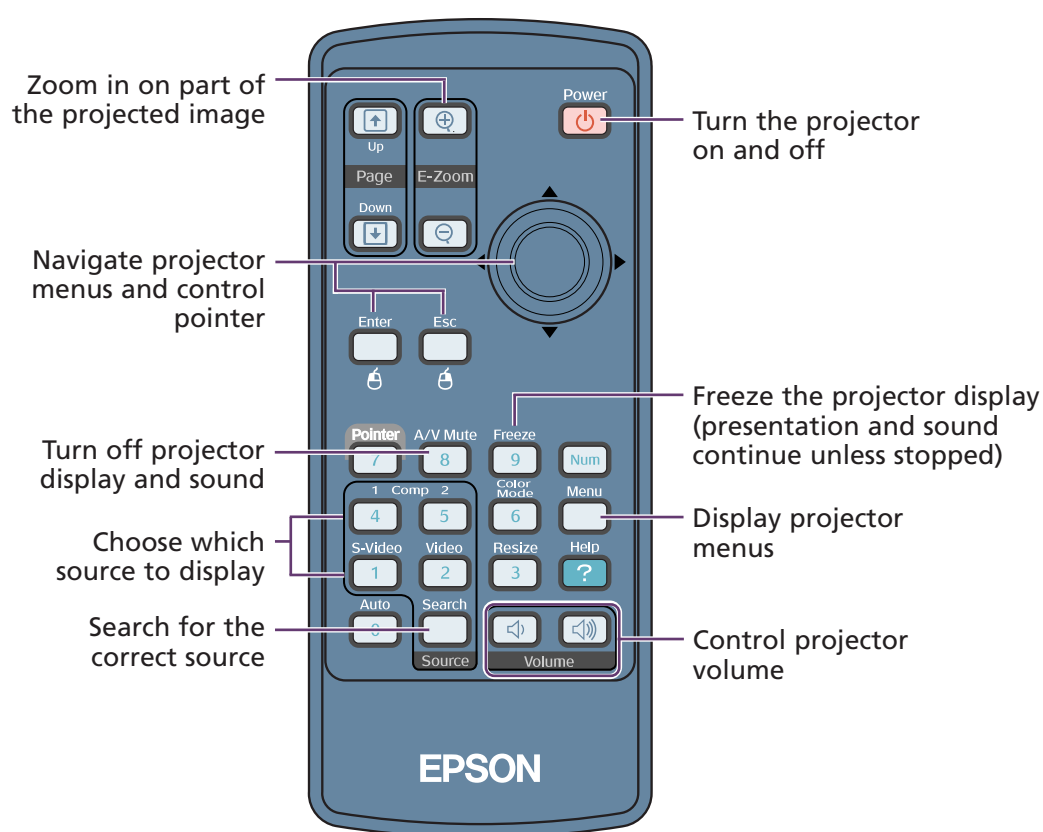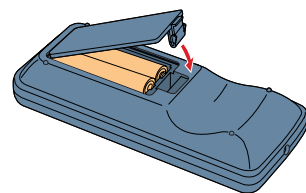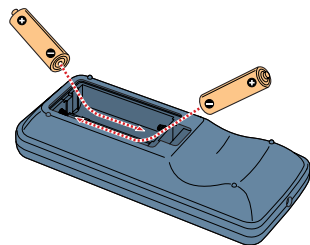

With the USB cable included with the projector, you can use the remote as a wireless mouse. For more information on the wireless mouse function and on general use of the remote control, see your *User's Guide*.

NOTE: Put your remote in a safe place. You'll need it if you use a password with the projector. See the *User's Guide* for details.

Where to get help

Telephone Support Services

To use the Epson PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the Epson PrivateLine Support card included with your projector. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period. You may also speak with a projector support specialist by dialing one of these numbers:

U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday through Friday

Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday

Toll or long distance charges may apply.

Electronic Support Services

Epson provides technical assistance through electronic support services 24 hours a day at <http://support.epson.com>. For tips, templates, and training for developing successful presentations go to <http://www.presentersonline.com>.

Troubleshooting

If you see a blank screen...

If you see a blank screen or the **No signal** message after turning on your notebook, check the following:

- Make sure the **Power** light on the projector is green and not flashing, and the lens cover is off.
- Press the **Comp 1** button on the remote control to select **Computer 1** as the image source.
- If you're using a Windows® notebook, press the function key on your keyboard that lets you display on an external monitor. It may be labelled **CRT/LCD** or have an icon such as . You may have to hold down the **Fn** key while pressing it. Allow a few seconds for the projector to sync up after changing the setting.

If the projector and notebook don't display the same image...


If your image displays either on the projector or notebook, but not on both, check the following:

Windows

Try using the **CRT/LCD** or key as described above. On most systems, this key lets you toggle between the LCD screen and the projector, or display on both at the same time.


If that doesn't work, check your monitor settings to make sure both the LCD screen and the external monitor port are enabled.

 - From the Windows Control Panel, open the **Display** utility.
- In the Display Properties dialog box, click the **Settings** tab, then click **Advanced**.
- The method for adjusting the setting varies; you may have to click a **Monitor** tab, then make sure the external Monitor port is set as your primary display and/or enabled. See your notebook's manual or online help for details.

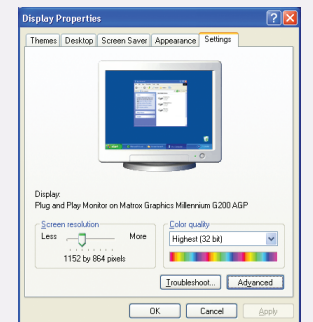


Macintosh® OS X

 - From the Apple® menu, select **System Preferences**, then select **Displays**.
- Select the **Color LCD** dialog box.
- Click the **Arrange** (or **Arrangement**) tab and click **Mirror Displays**.

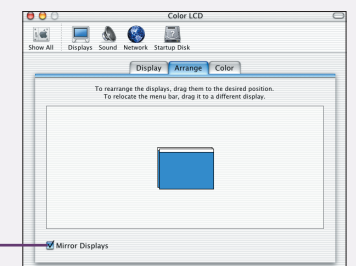

Macintosh OS 9.x or earlier

 - From the Apple menu, select **Control Panels**, then click **Monitors** or **Monitors and Sound**.
- Click the **Arrange** icon.
- Drag one monitor icon on top of the other.

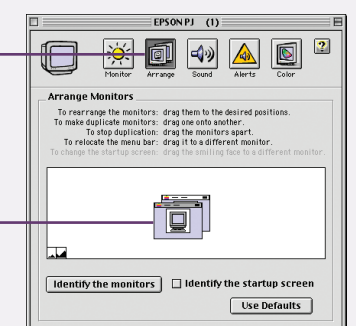

If the **Arrange** option isn't available, click the **Monitor** icon and select a **Simulscan** resolution.